




# How big should your sub-frame be?

Our guide to sizing your sub-frame for the back of **ChromaLuxe**® and Printed Panels

We recommend a border of between 25-75mm (depending on panel size)

*for square cut profiles*

using Moulded Push-In Corners

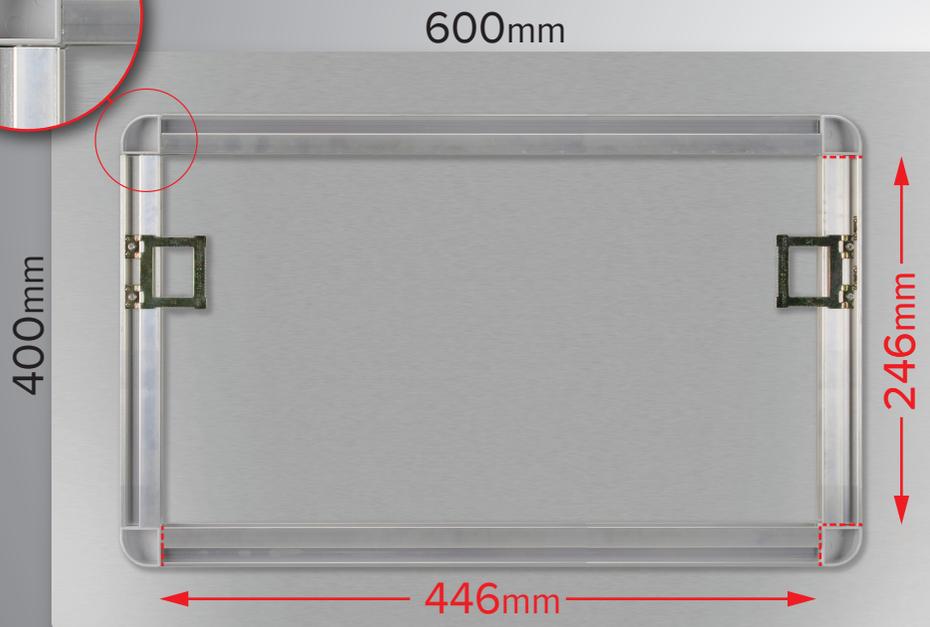


Panel Size: 400 x 600mm, with a 50mm border

- External Sub-Frame is 300 x 500mm
- Moulded Push-In Corners: subtract 27mm each end (54mm in total)

• Order Sub-Frame pieces at 246 x 446mm

*for mitre cut profiles*

using Steel Push-In Corners  
or Double-Plate Hardware

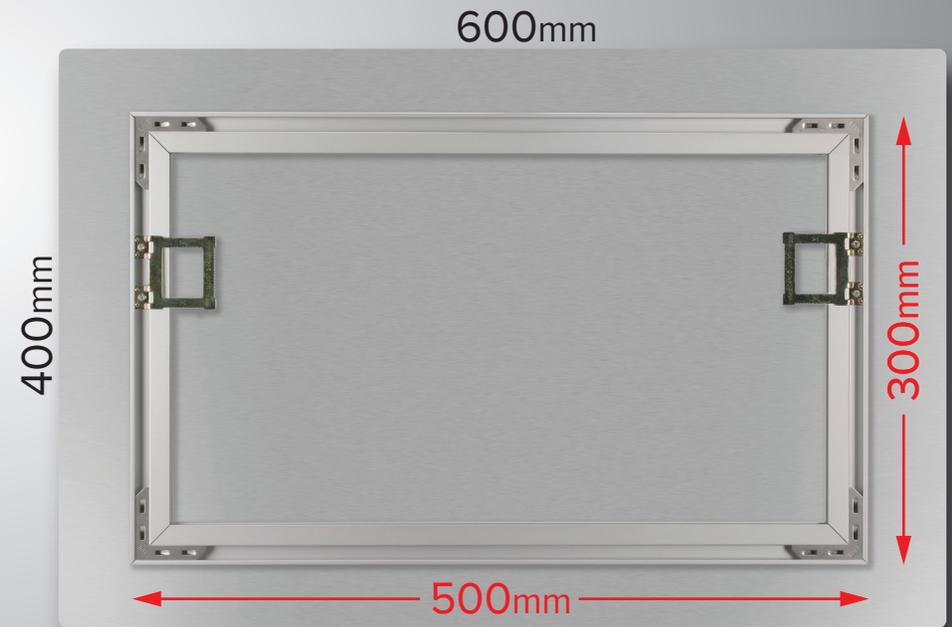

Panel Size: 400 x 600mm, with a 50mm border

- External Sub-Frame is 300 x 500mm

• Order Sub-Frame pieces at 300 x 500mm